



www.foxterra.com

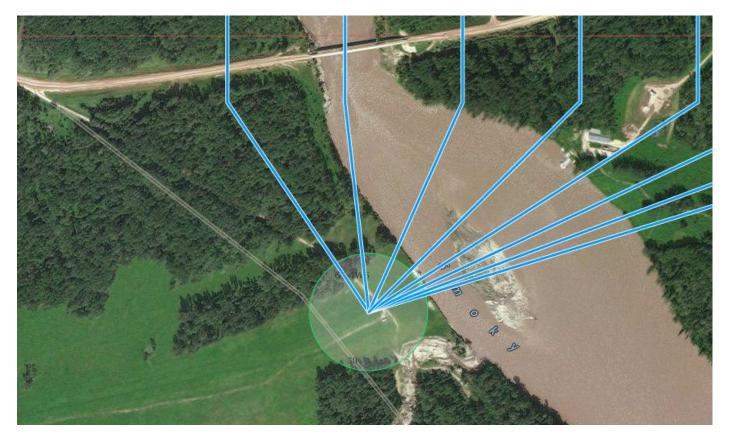


Save days and weeks of effort

- Create accurate drilling plans in minutes
- Save hundreds of thousands of dollars maximizing well length
- Export and import plans for review and modification

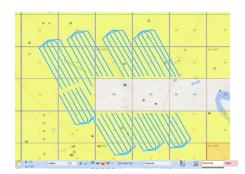

Hundreds of wells

Accurately place wells to get the ultimate return on your holdings

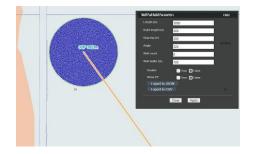

Stay Compliant and Maximize well length

Easily drag surface and bottom-hole locations to optimal position

Pa	d Cut ☐ Copy ste ☐ Format Painter ☐ Upboard ☐	Gibri B / U	_	Α΄ Α΄ Δ · <u>Δ</u> ·	= . E = :	¥>• E E Algor			General \$ - % Num	· 영화	Conditi Fornalti				Bad Explore
Ξ	A1 •	9	fi Legal												
	A	В	С	D	Е	F	G	Н	-1	J	K	L	M	N	0
1	Legal	UTMZone	surfaceLo	surfaceLa	heelton	heelLat	toelon	toelat	surfaceX	surfaceY	heelX	heelY	toeX	toeY	
2	10x090606804600	11	-118.597	54.83181	-118.579	54.83504	-118.579	54.8602	397421	6077244	398589	6077578	398653	6080377	
3	10x100606804600	11	-118.597	54.83181	-118.582	54.83504	-118.582	54.86021	397421	6077244	398389	6077582	398453	6080382	
4	10×120506804600	11	-118.597	54.83181	-118.585	54.83504	-118.585	54.86021	397421	6077244	398139	6077587	398253	6080387	
5	10x120506804600	11	-118.597	54.83181	-118.588	54.83504	-118.588	54.86021	397421	6077244	397989	6077591	398053	6080391	
6	10x090606804600	11	-118.597	54.83181	-118.594	54.83504	-118.595	54.8602	397421	6077244	397589	6077600	397652	6080399	
7	10x120506804600	11	-118.597	54.83181	-118.591	54.83504	-118.591	54.8602	397421	6077244	397789	6077596	397853	6080395	
8	10x130606804600	11	-118.597	54.83181	-118.598	54.83504	-118.599	54.84831	397421	6077244	397389	6077605	397309	6079083	
9	10x143106704600	11	-118.597	54.83181	-118.585	54.8448	-118.609	54.8642	397421	6077244	398247	6078672	396754	6080866	
10															
11															

Export and Import plans

Surface, Toe and Heel Positions stored for reference and construction